

# HKS35F/HKS60F

SE


Bruksanvisning

GB

Instructions for use

---



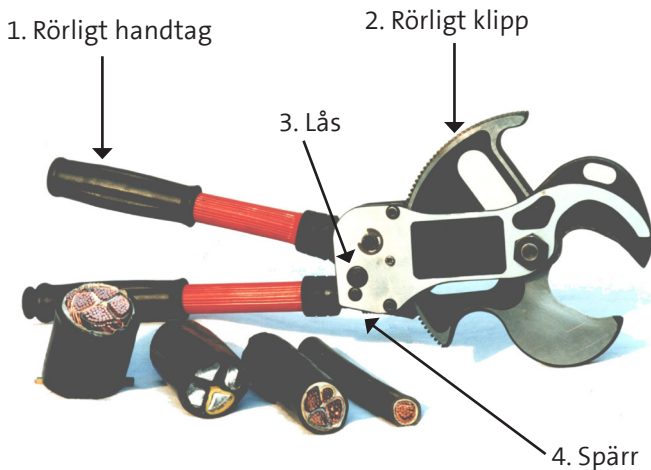


HKS35F och HKS60F är uppbyggda på samma sätt. Bilden ovan visar HKS60F men anvisningarna nedan gäller också HKS35F.

- Det rörliga handtaget (1) frigörs från transportsäkrat läge genom att låsvredet (3) vrids från röd till grön position.
- Det rörliga klippskäret (2) kan svängas fritt åt båda håll när handtaget (1) står i fullt öppet läge och spärren (4) trycks in. På detta sätt öppnas saxen för kabeln.
- När kabeln förts in mellan skären trycks det rörliga klippskäret (2) mot kabeln (spärren behöver nu inte tryckas in) för att man inte ska behöva "pumpa i luften".

Kapacitet	HKS35F	HKS60F
Kabeldiameter, max	Ø 35 mm	Ø 60 mm
Ung. ledararea, max	240/300 mm <sup>2</sup>	630 mm <sup>2</sup> Mycket beroende på typ!



**OBS! Klipp inte hård ståltråd/lina, hårddragen koppar eller mässing eller legerad aluminium!**

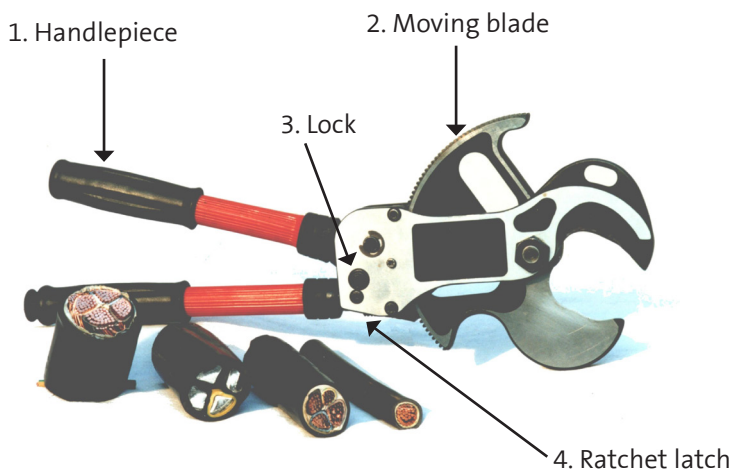

HKS35F and HKS60F have the same general design. The picture above shows the HKS60F but is equally applicable on the HKS35F.

- The moving handlepiece (1) is released from the locked transportation mode by turning the lock (3) from red to green position.
- The moving cutter blade (2) can swivel in both directions when the handle piece (1) is fully opened and the ratchet latch (4) is pressed. This way the cutter is opened for the cable to be cut.
- When the cable has been placed between the cutter blades, the moving blade (2) is closed towards the cable by hand (the ratchet latch must not be pressed) in order to avoid idle handle “pumping”.

Capacity	HKS35F	HKS60F
Cable diameter, max.	Ø 35 mm	Ø 60 mm
Appox. cond. area, mm <sup>2</sup>	240/300 mm <sup>2</sup>	630 mm <sup>2</sup> (subject to type!)



**NOTE!** Do not cut hard steel wire, hard copper or brass or hard alloy aluminium

---

**Elpress AB** · P.O. Box 186, SE-872 24 KRAMFORS, Sweden  
Tel: +46 (0)612-71 71 00 | Fax: +0)46 612-71 71 51  
E-mail: sales@elpress.se | www.elpress.se



8052-02/400